


OWNER'S MANUAL

P/N 50QE900-511WS



Programmable Digital Thermostat

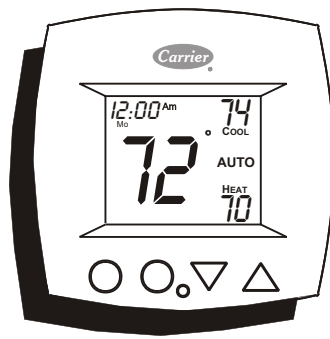

• Includes Locking Cover

- Dual Setpoint
- 5+1+1 Day Programmable
- 3 Occupied, 1 Unoccupied
- Very Easy to Program
- Large, Easy To Read Display
- Thermoglow™ Backlight
- No Batteries Required
- Auto Changeover
- Energy Saving Smart Fan
- Locking Keypad
- Override Button

Meets California Title 24

Designed for Commercial Water Source Heat Pumps



Commercial Systems & Services © Carrier Corporation 3/00

Table Of Contents

FRONT PANEL	2
DISPLAY	3
QUICK START <i>Set the clock and go</i>	5
BASIC OPERATION	6
PROGRAMMING <i>Occupied / Unoccupied</i>	8
ADVANCED SETUP	13
ABOUT ADVANCED OPERATION	17
WARRANTY	22



CAUTION


Follow *Installation Instructions* before proceeding.

SET THERMOSTAT TO MODE "OFF" PRIOR TO
CHANGING SETTINGS IN SETUP OR RESTORING
FACTORY DEFAULTS.

Commercial Systems & Services © Carrier Corporation 3/00


P/N 50QE900-511WS

Front Panel

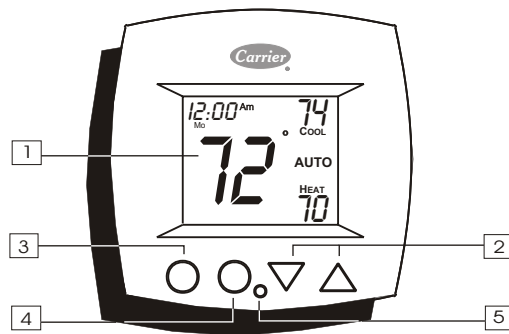

- 1 Liquid Crystal Display**
with Thermoglow™
- 2 Up/Down Buttons**
- 3 Mode Button**
- 4 Override Button**
- 5 Heat or Cool Indicator**
Heat = Red, Cool = Green

Display

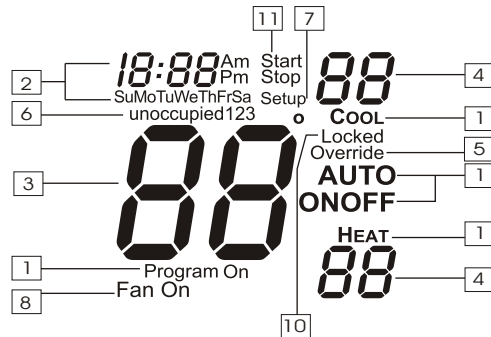

1 Mode Indicators

Selects the operation mode of the equipment.

HEAT - indicates the heat mode.

COOL - indicates the air conditioning mode.

AUTO - indicates the system will automatically changeover between heat and cool modes as the temperature varies.

OFF - indicates the entire system is turned off.

PROGRAM ON - indicates the stored program is enabled to run. *Page 8.*

2 Clock with Day of the Week

Indicates the current time and day. This clock is also used to program the timer periods. *Page 13.*

3 Room Temperature Display

Indicates the current room temperature.


4 Desired Set Temperature

Indicates desired room temperature(s). *Page 7.*

Display

- 5 Override Indication
Indicates the current program is currently being overridden for up to 4 hours. *Page 7,17.*
- 6 Occupied or Unoccupied Indication
Indicates the program number: Occupied 1,2,3, or Unoccupied. *Page 8-12.*
- 7 Setup Indication
Indicates the thermostat is in the programming mode. *Page 13.*
- 8 Fan Operation Indication
Fan On - indicates constant, continuous fan operation.
When **Fan On** is not lit - indicates the fan will only operate when necessary to heat or to cool. *Page 13.*
- 10 Locked Indication
Locked appears after the right combination of buttons are pressed, rendering the buttons inoperative. *Page 19.*
- 11 **Start / Stop** Indication
Start or Stop appears when programming timer functions. *Page 9.*

Quick Start *Set the Clock and Go*

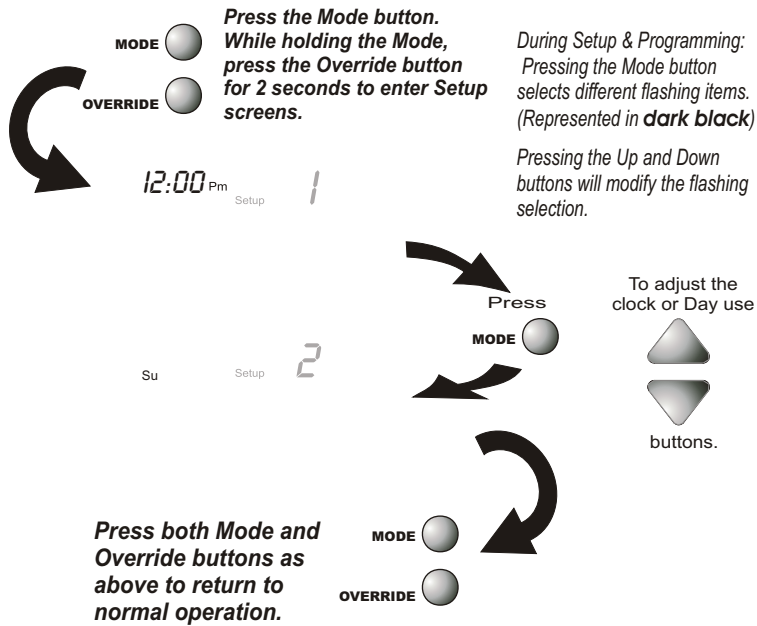

The thermostat is preprogrammed from the factory to operate 1 or 2 Stage equipment without the need for further programming. To optimize the installation of this thermostat follow the instructions in the Advanced Setup section.

Basic Operation

Select Mode


The **HEAT** setting indicates the temperature the room has to reach before the furnace will turn on to heat the room.

The **COOL** setting indicates the temperature the room has to reach before the air conditioner will turn on to cool the room.

AUTO will automatically select heat or cool based on room temperature demand.

Program On will activate the stored timer operation.
(occupied & unoccupied periods.)

OFF indicates both heating and air conditioning systems are turned off.

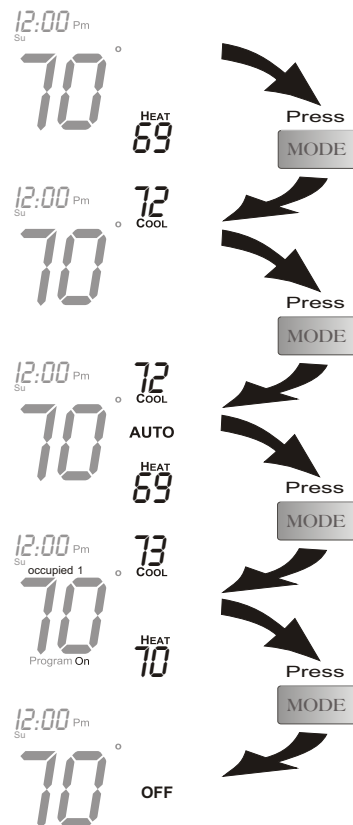

Basic Operation

Select Desired Temperature




In any mode, adjust the desired Set Temperature with



buttons.


Pressing the up/down buttons in Auto mode will adjust **both** the heat and cool set temperatures simultaneously.
Pressing the up/down buttons in Heat or Cool modes will adjust only the heat or cool set temperature.

Override

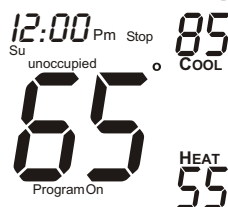

During programmed, unoccupied periods a press of the Override button will force the thermostat into Occupied 1 comfort settings, temporarily.

With each successive push of the Override button, the override timer will add 30 minutes, until the maximum of 4 hours is reached. Then the next press will zero out the override timer, returning to unoccupied if there are no further button presses.

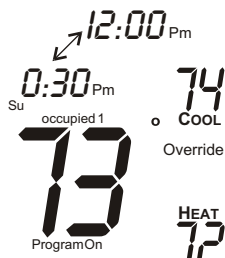


When in Override, the Override icon and the Occupied 1 icon appear on the display.

The time of day clock alternates with the time remaining in override.

During Override, the setpoints are adjustable, provided the keypad is not locked.

Programming Occupied & Unoccupied Periods

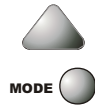

Press the Mode button. While holding the Mode, press the Up button for 2 seconds to enter time period programming.



Select the maximum # of occupied periods to be used on any one day. Typically 1.
(1, 2 or 3)

Occupied 1



Adjust the cooling setpoint for occupied 1.
(35 - 99°)

Occupied 1

74
COOL



Adjust the heating setpoint for occupied 1.
(35 - 99°)

Occupied 1

74
COOL


HEAT
72



Adjust the cooling setpoint for unoccupied periods.
(35 - 99°)

unoccupied

85
COOL

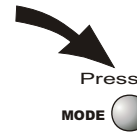

Press

MODE



Press

MODE



Press

MODE



Press

MODE

Continued

Programming

Occupied & Unoccupied Periods



Adjust the heating set-point for unoccupied periods.
(35 - 99)

unoccupied

HEAT
55

Press
MODE



Select the day for Occupied 1.
(MoTuWeThFr, Sa, Su)

MoTuWeThFr
Occupied 1

Press
MODE



Adjust the start time for occupied 1.

7:00 Am Start
MoTuWeThFr
Occupied 1

Press
MODE



Adjust the stop time for occupied 1.

6:00 Pm Stop
MoTuWeThFr
Occupied 1

Press
MODE



On
Select Occupied 1 to run on this day (On), or not to run this day (Off).
Off


MoTuWeThFr
Occupied 1

ON

Press
MODE


Continued

Programming Occupied & Unoccupied Periods

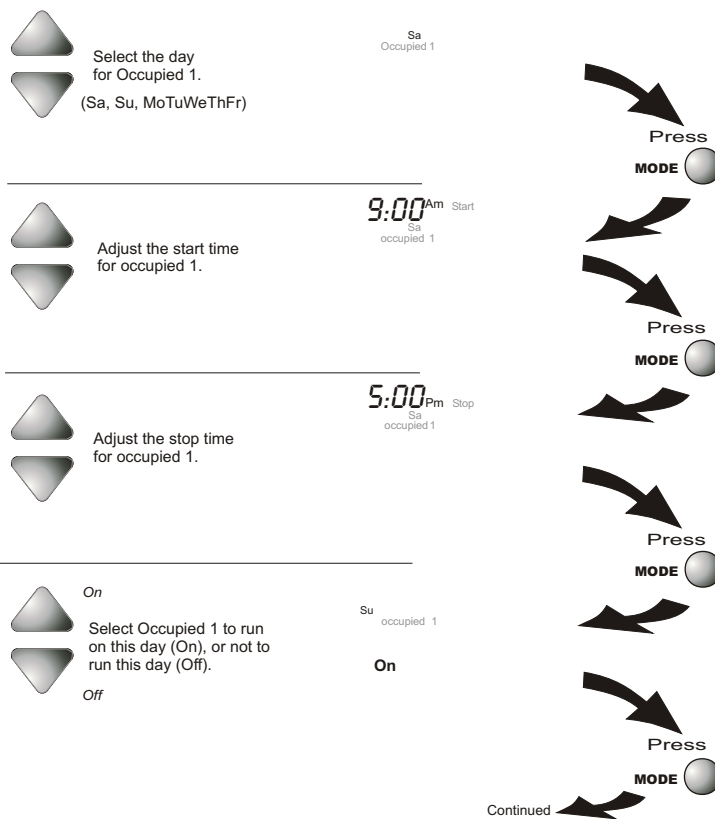

Programming


Occupied & Unoccupied Periods

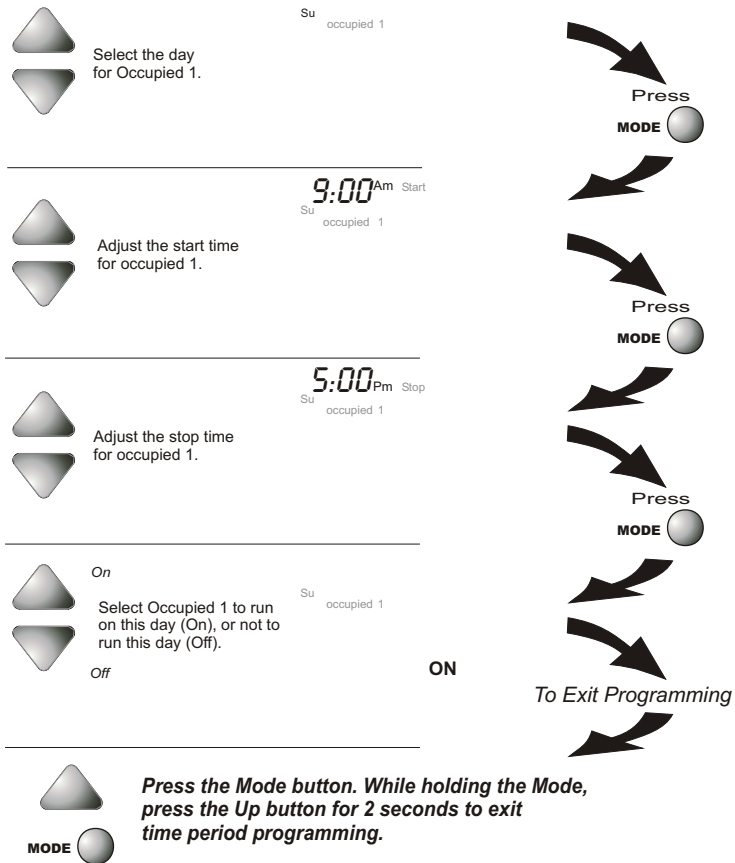

PROGRAMMING NOTES

- * If only 1 Occupied period is selected in step 1 on page 8, Occupied 2 & 3 programming steps are skipped.
Further, if only 2 occupieds are selected, Occupied 3 programming steps are skipped.
- * Heat & Cool setpoints for Occupied 1 are the same for every day of the week.
Heat & Cool setpoints for Occupied 2 & 3 can be adjusted differently for each day of the week, if desired.
- * **If the start time is set later in the day than the stop time,**
the program will run from the start time to midnight and from midnight to the stop time on the same day. *For example: 9:00pm start, 8:00am stop, on MTWTF. In this example the program will run from 12:00am MTWTF to 8:00am MTWTF and again from 9:00pm MTWTF to 12:00pm MTWTF.*
- * The Unoccupied settings take effect at all times when:
(1) the program is on **and** (2) the current time is outside a preset occupied period.
For this reason start and stop times aren't necessary for unoccupied.
- * If the **same** start and stop times are programmed in for an occupied period, then it will run 24 hours.
- * If one occupied period starts and stops within another occupied period, the lower occupied # has priority.
For example: If Occupied 3 is programmed to be "on" 24 hours, and Occupied 2 is programmed to run that day, then Occupied 2 settings will take over from occupied 3 between Occupied 2 start and stop times.

Advanced Setup

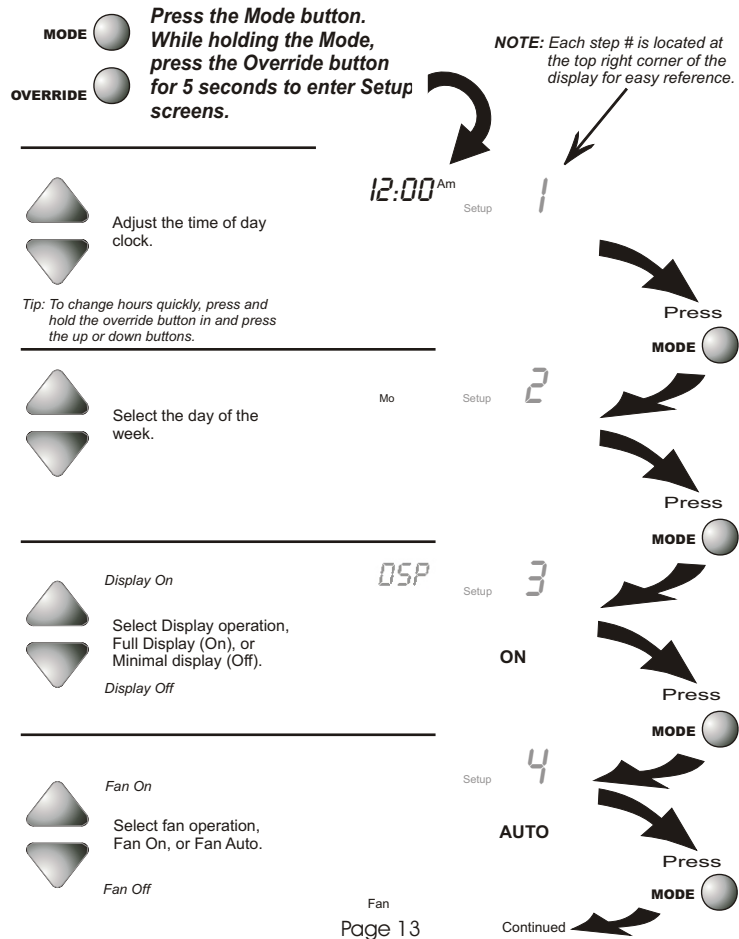


Advanced Setup



Adjust the deadband
from 1 - 6 degrees.

db Setup 5
2

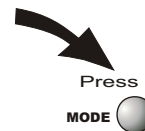

Adjust the minimum
difference between
cooling & heating
setpoints.
(0 - 6°)

dIF Setup 6
2 COOL
HEAT



Select the cycles per
hour limit.
d=cycles per hour
limit defeated.
d1=d + defeat 5 min.
Compressor lockout.
(d, d1, 2 - 6)

Setup 7
6 CY



On
Select the display back-
light always **On**, or **Off**
after 8 seconds.
Off

Setup 8
LI ON




Continued

Advanced Setup



C
Select thermostat
operation in degrees
Fahrenheit or Centigrade.
F

Setup ° 9
F

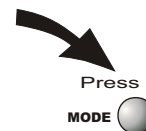


Press
MODE



B
Select the reversing
valve polarity for
Heat Pump, O or B.
O

 Setup 10
0

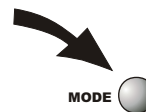

MODE



OVERRIDE

**Press the Mode button.
While holding the Mode, press the Override
button for 2 seconds to leave the Setup
screens. If no buttons are pressed, the
display will leave the setup screens after
30 seconds.**


Advanced Setup

Advanced Setup Table

Step #	Description	Range	Factory Default
1	Time of day clock set	24 hour	12:00 Am
2	Day of the week	Sun - Sat	Monday
3	Display Blanking	Off / On	On
4	Fan operation	Auto / On	Auto
5	Deadband or Temperature swing	1 - 6	2
6	Forced minimum difference heat/cool	0 - 6	2
7	Cycles per hour	d, d1, 2 - 6	6
8	Thermoglow backlight	Off / On	On
9	Fahrenheit or Centigrade	F / C	F
10	Reversing Valve polarity	O / B	O

About Advanced Features & Operation


- * **CLOCK BACKUP** - In the event of a power loss, the thermostat internal clock will continue to keep proper time for a minimum of 48 hours without external power or batteries.
- * **2 STAGE OPERATION** - The 2nd Stage of heat or cool is turned on when **(1)** the 1st Stage has been on for a minimum of two minutes, **and (2)** the temperature spread from the setpoint is equal to or greater than: *the setpoint plus the deadband, plus 2 degrees.*

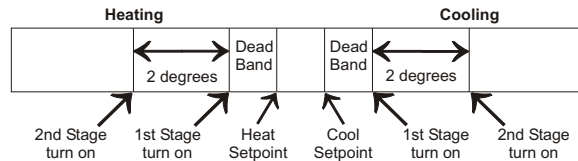

- * **MINIMUM HEAT/COOL SETPOINT DIFFERENCE** - The Heat and Cool setpoints will not be allowed to come any closer to each other than the value set in Advanced Setup *step # 6, on page 14*. This minimum difference is enforced during Auto changeover and Program On operation.
- * **ENERGY SAVING SMART FAN** - If Fan On is selected, *page 13, step 4*, the fan will run continuously at all times, except in Off, **and** will only run if there is a heating or cooling demand in Unoccupied periods.
- * **OVERRIDE** - As explained on *page 7*, pressing the Override button during a programmed, Unoccupied period will force the thermostat into Occupied 1, temporarily, up to 4 hours. If the Override button is pressed during an Occupied period, the thermostat will be forced into Unoccupied and the occupied # (*1, 2 or 3*), it was forced out of will be turned off, only for that day. During Override periods the setpoints may be adjusted, but they will not be remembered after Override ends.

About Advanced Features & Operation


- * **EMERGENCY HEAT** - To turn on Emergency Heat press in the Override button. While holding the Override button press the Up button for 2 seconds. The Cool setpoint display will read 'EH'.

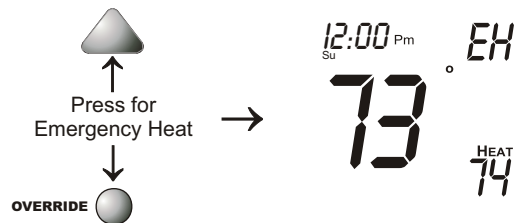

During Emergency Heat the thermostat will turn on the fan and the 2nd stage of heat, when there is a demand for heat, locking out the 1st stage compressor. Exiting Emergency Heat is the same as entering. During Emergency Heat only OFF and HEAT are available.

About Advanced Features & Operation

- * **KEYPAD LOCK** - To prevent unauthorized use of the thermostat, the front panel buttons may be disabled. To disable, or 'lock' the keypad, press and hold in the Mode button. While holding the Mode button in, press the Up and Down buttons in together. The **Locked** icon will appear on the display.

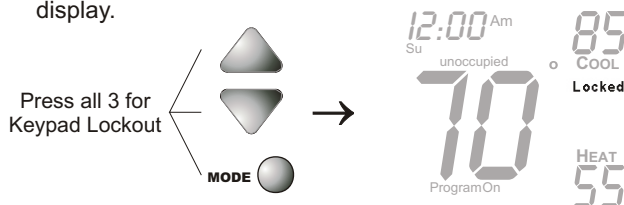

To **unlock** the buttons, again press and hold the Mode button. While holding the Mode button in, press the Up and Down buttons in together. The **Locked** icon will disappear from the display.

- * **DISPLAY BLANKING**

The thermostat display may be configured in advanced setup, *page 13, step 3*, to always be visible as normally expected, or may be selected Off. When selected Off, only the time of day will appear until a button is pressed. When a button is pressed the full, normal display will appear then revert to the time of day only, after roughly 10 seconds.


About Advanced Features & Operation

- * **DUAL SETPOINT BEHAVIOR** - The adjustable setpoint range is: 35 - 99 degrees in Fahrenheit and 7 - 35 degrees in Centigrade. When in the modes Heat or Cool, this adjustable range is unhampered. When adjusting any Auto mode, including programming Occupied and Unoccupied periods, the thermostat will not allow the Heat setpoint to get closer to the Cool setpoint than the value programmed as the minimum difference in *step 9, page 14*. When entering the Auto mode from Cool, the Heat and Cool setpoints will remain spread apart by the amount that they were adjusted, prior to entering Auto. For example: If the Cool setpoint was set to 80 while in the Cool mode and the Heat setpoint was adjusted to 70 while in the Heat mode, upon entering the Auto mode the Heat and Cool setpoints would be 80 and 70. **Both** setpoints would then move up and down together, (in this example spread by 10 degrees), by pressing the up or down buttons. To move the Heat and Cool setpoints closer together, enter the Cool or Heat mode by pressing the Mode button, then adjust the setpoint(s) closer together. Heat is limited to how close it can come to Cool by *step 9, page 14*.

About Advanced Features & Operation

- * **FACTORY DEFAULTS** - If, for any reason it is desirable to return all stored settings back to the factory default settings, press the Mode button. While holding the Mode button in, press the Down button for 2 sec. All icons will appear. Press and hold in the Override button until **Fd** appears. This resets all factory settings. **To calibrate room temperature**, press the Mode button once more. At this point use the Up and Down buttons to calibrate room temperature, if needed. Press the Mode button to return to normal operation. **NOTE CAUTION ON PAGE 1.**

- * **LOCKING COVER**
w/Tamper Proof Screws

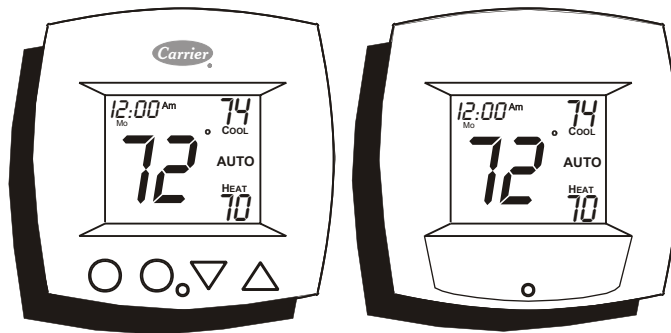

Warranty

One Year Warranty –

peas with
bbnw when the product
actual use begins on that date that
the product does not meet this warranty, a new one manufactured by the COMPANY'S sole
op to be placed on any defective repair be provided without charge of the repair
PROVIDED the defective repair be returned to the distributor through a qualified service dealer

THIS WARRANTY DOES NOT INCLUDE LABOR OR OTHER COSTS incurred for diagnosing,
repairing, moving, shipping, handling, and going to the defective repair or
replacement parts. Such costs may be covered by a separate warranty provided by the dealer.

THIS WARRANTY APPLIES ONLY TO PRODUCTS IN THEIR ORIGINAL INSTALLATION
LOCATION AND BECOMES VOID UPON REINSTALLATION.

LIMITATIONS OF WARRANTIES ALL IMPLIED WARRANTIES INCLUDING IMPLIED
WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANT ABILITY ARE
HEREBY LIMITED DURING THE PERIOD FOR WHICH THE LIMITED WARRANTY
GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED
WARRANTY LASTS. SO THE ABOVE MAY NOT APPLY TO YOU. THE EXPRESSED
WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED,
ENLARGED OR CHANGED BY ANY DISTRIBUTOR, DEALER OR OTHER PERSON
WHATSOEVER.

ALL WORK UNDER THE TERMS OF THIS WARRANTY SHALL BE PERFORMED DURING
NORMAL WORKING HOURS. ALL REPLACEMENT PARTS, WHETHER NEW OR
REMANUFACTURED, ASSUME THE WARRANTY PERIOD ONLY THE REMAINING
TIME PERIOD OF THE WARRANTY.

THE COMPANY WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance and the installation and service instructions of the
manufacturer, including cleaning and replacement and lubrication.
2. Damage or expense due to a consequence of faulty installation, misuse,
improper use, unauthorized alterations or improper use.
3. Failure due to voltage conditions, power supply, or other causes other
damages due to the inadequacy of the power supply or service.
4. Damage to a sub-body or to the body of the machine or to the environment or
to the conditions beyond the control of the Manufacturer.
5. Parts not supplied or designated by the Manufacturer, damages due to the use.
6. Manufacturer products sold outside the continent of USA, Alaska, Hawaii and
Canada.
7. Electrical costs or the cost of electrical parts for many years on whatsoever
including additional use of supplementary electrical heat.
8. ANY SPECIAL DIRECTOR CONSEQUENT AL PROPERTY OR COMMERCIAL
DAMAGE OF ANY NATURE WHATSOEVER. Some states do not allow the exclusion of
incidental or consequential damages of the above. This may not apply to you.

This warranty gives you specific rights, and you may also have other rights which may vary
from state to state.